Bahama®

OPERATING INSTRUCTIONS

LED-LIGHTING





©Bahama GmbH, Gewerbeparkstr. 34, D-51580 I Reichshof, Germany

This manual contains all important information about the LED lighting of our parasols. Please do not toss this instruction manual.

WARNINGS

- Please read this manual carefully and follow all safety instructions.
- If you have any questions, please contact us.
- The necessary electrical work should be carried out by an approved specialist company.
- In case of non-compliance with the given instructions, the manufacturer assumes neither liability nor warranty.



TABLE OF CONTENTS

Functionality of the remote control. 3

Programming the remote control 4
Reset the controller 4
Setting up several umbrellas 4
Setting up several umbrellas in one zone and different zones 4

Connection via WiFi | App 5
App set up 5
Change the name and image of a “room” 7



©Bahama GmbH, Gewerbeparkstr. 34, D-51580 I Reichshof, Germany

FUNCTIONALITY OF THE REMOTE CONTROL

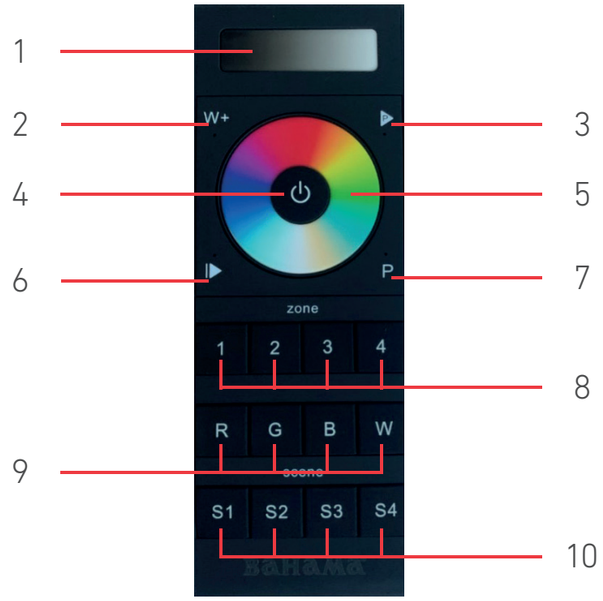

1. Adjustment of brightness by slowly swiping or pressing (RGB colors only). For dimming white press and hold W button (item 9).
2. Click for Warm White, Neutral White, Cold White
3. Press to play the programmed channels in the following 4 ways:
   jump
   flash
   fade
   strobe
4. Switching on and off all zones
5. Color wheel for color selection
6. Play | Pause – for 10 installed programs - hold down to control playback speed
7. Program Adjustment:
   - Press the button – the light in the umbrella lights up once
   - Now select colors 2-5 (max. 5) via the color selection.
   - Press the button again – the light in the umbrella lights up once again, the program has been saved
   - the program can now be called by pressing the P button
8. Switching the programmed umbrellas on and off separately
   In order to switch on or off individual zones hold the button of the selected zone for a long time
9. | R-Red | G-Green | B-Blue | W-White | -Channel
   Press to turn the respective channel on and off. Hold down to adjust the light intensity. The color that has been selected first is mixed with the additionally selected color. If this is not desired, the first color must be de-selected by pressing the respective button again. For resetting the colors switch off all colors and touch the color wheel.
10. Press and hold to save colors and settings
    - First select the desired color in the desired brightness. To save the selection (scenery) press one of the S1-S4 keys and hold it, until the umbrella flashes once.

©Bahama GmbH, Gewerbeparkstr. 34, D-51580 I Reichshof, Germany

PROGRAMMING THE REMOTE CONTROL

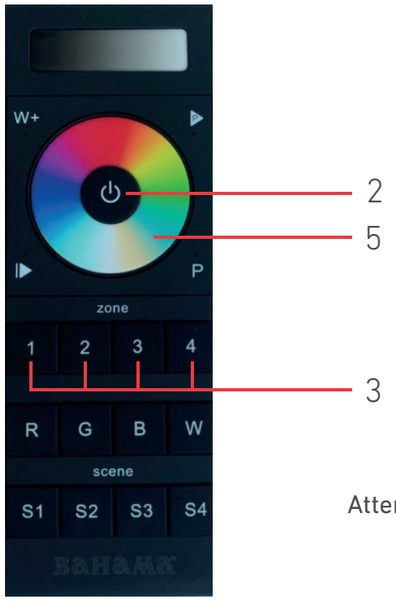

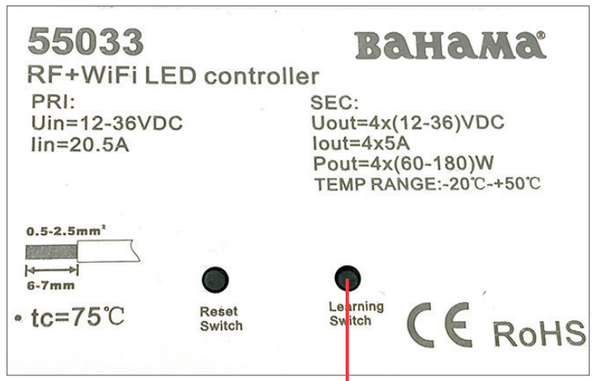

Attention: For reliable operation, please avoid dirt on the remote control. The touch elements should always be clean and free of grease.

Reset the controller:
Hold the Learning Switch until the stripes flash briefly and glow white again.

Each umbrella must be programmed individually

1. Connect the parasol to the power supply
2. Switch on the remote control (Lamp on the remote control lights up blue, which might be difficult to see in daylight). The remote switches itself on when Zone 1 is pressed two times.
3. Shortly press the respective button to select the zone
4. Press Learning Switch briefly (1 sec)
5. Circle over the color wheel until the color of the LED strips changes

Repeat the procedure of step 3 to programm several parasols
(you should wait 15-20 sec. between programming two parasols).

We recommend programming not more than four to six parasols to one zone (depending on the arrangement). The individual parasols can also be programmed to severals zones. This is particularly recommended if the parasols are installed far apart from each other.



©Bahama GmbH, Gewerbeparkstr. 34, D-51580 I Reichshof, Germany

Bahama®

CONNECTION VIA WIFI I APP

General Information | Troubleshooting:
- Allow the app to access your device
- WiFi router must have the approval that all devices integrated in the WiFi are allowed to communicate with each other
- Before step 15, check if only one room has been selected. If two or more are selected, they cannot be integrated into the home network.
- Check whether the device is still connected to the ECU's WiFi before carrying out step 15.
- When connecting more than one parasol, connect the parasols to power one after the other for indetifying the SSID.

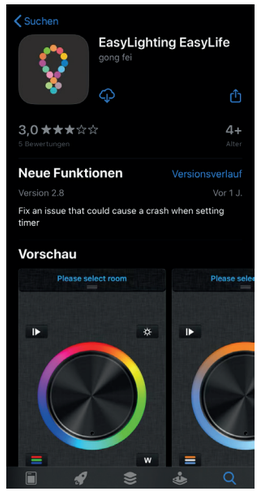

1. Install app "EasyLighting EasyLife"
   The apps can be found using the following QR codes:

ANDROID iOS

2. Connect your smartphone to the WiFi of the LED controller in the parasol, SSID: EasyLighting_... Passwort: 0123456789

3. Open App

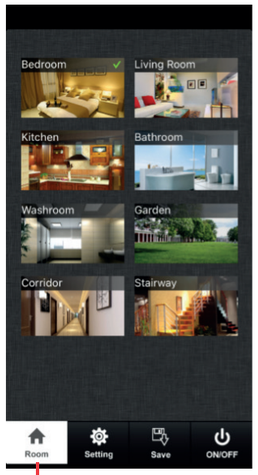

4. Tap on "Room" and select a room



5. Tap on "Setting"

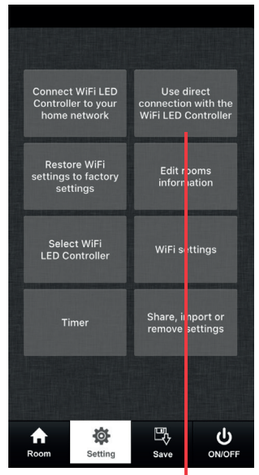

6. Tap on "connection with the Wifi LED Controller"

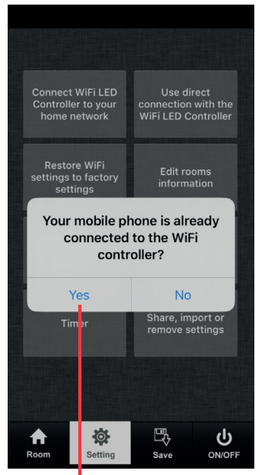

7. Tap "Yes"



©Bahama GmbH, Gewerbeparkstr. 34, D-51580 I Reichshof, Germany



8. Tap on “Setting”

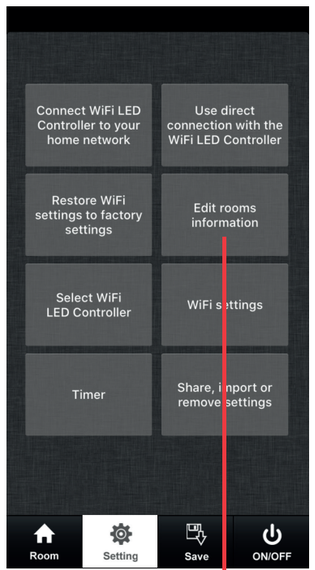

9. Tap on “Edit rooms information”

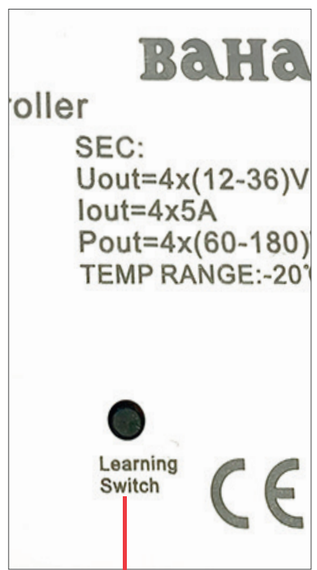

10. Press "Learning Switch" at the LED controller

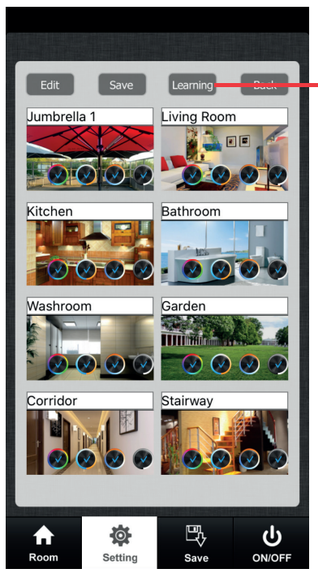

11. Tap “Learning” in the app (max. 3-5 sec after step 10)
-> LED in the parasol starts flashing

12. Select a “room” in the list to which the the parasol shall be programmed. Later on it is possible to change the names and photos of the rooms (e. g. Jumbrella 1, Jumbrella 2. . .) to identify the parasols.

©Bahama GmbH, Gewerbeparkstr. 34, D-51580 | Reichshof, Germany

The LED controller now has to be added to your private WiFi.



13. Tap on “Setting”

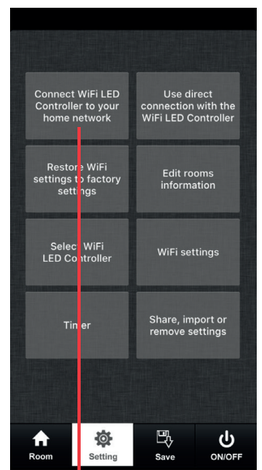

14. Tap on "Connect WiFi LED Controller to your home network"

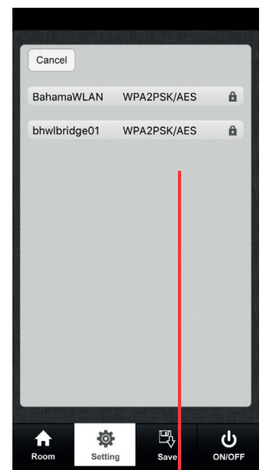

15. Select private WiFi and enter the corresponding password

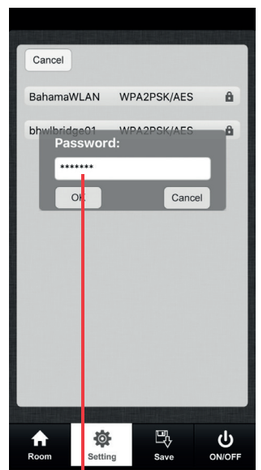

16. If desired, additional parasols can be added to the same room.
The procedure also applies to the other rooms.



19.

18.

17.

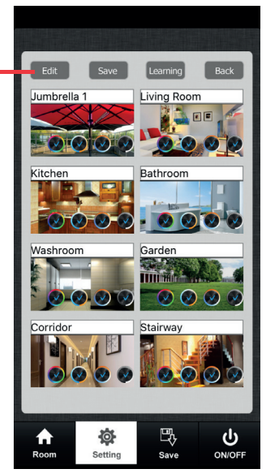

Change the name and image of a “room”

17. Tap on “Setting”

18. Tap on "Edit rooms Information"

19. Tap on "Edit"

20. Tap on the name of the room to change the name | Tap on the image of the room to take a picture.

©Bahama GmbH, Gewerbeparkstr. 34, D-51580 | Reichshof, Germany

Bahama®



©Bahama GmbH, Gewerbeparkstr. 34, D-51580 I Reichshof, Germany